


To install the SecurTech Benchtop Anchor Pin:

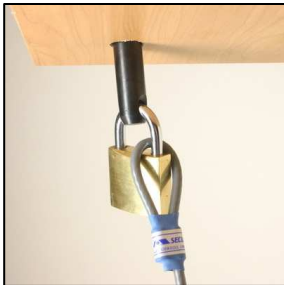

- Determine the best location on your desk, table or bench to locate the Benchtop Anchor Pin. Be sure the pin and the attached cable and padlock will not interfere with anything on either side of the surface.
- The mounting surface maximum thickness is 1-3/4"
- Mounting options:
 - Mount the pin vertically from top to bottom
 - Mount the pin vertically from bottom to top
 - Mount the pin horizontally from outside to inside
 - Mount the pin horizontally from inside to outside
- Mark the drill point. Be sure not to drill too close to the edge or corner of the surface.
- Using a 5/8" drill bit, drill a hole all the way through the surface. File or sand the edges to avoid splinters.
- Place the included washer over the pin and insert the pin all the way into the hole.
- Pass the padlock shackle through your security cable's end-loop and then through the hole in the Benchtop Anchor Pin. Secure the padlock.

Thank you for choosing SecurTech.