

CAUTION: Adhesive bonds on contact. Please read entire instructions first.

To mount the Secuready anchors to your equipment:


- Select the best location on your equipment to mount the anchor(s) by positioning the equipment where it will be used. Consider the position of each piece of equipment to be secured, where the anchors and cables will be located, and the stiffness of the cable. Be certain the mounting surfaces are flat and have no curves.
- Position the equipment so that the mounting surface is horizontal. Tip equipment if necessary. Clean the mounting surface.
- Apply a liberal bead of liquid adhesive to the anchor. Use enough adhesive so that when the anchor is pressed on, its entire mounting surface becomes completely coated. Adhesive is moisture activated so it may be helpful to lightly blow on wet adhesive surface.
- Press the anchor against the equipment case without twisting and hold firmly for at least 30 seconds. It is normal for some adhesive to ooze out the sides. Wipe away any excess adhesive with a tissue.
- Adhesive sets in seconds and anchor cannot be removed or adjusted. Allow several hours to fully set. Maximum bond is achieved after 24 hours.



CAUTION: Avoid getting adhesive on skin, in eyes or on clothes. Keep out of the reach of children. Use with care.

To lock down your system with the Secuready cable:

- Place the equipment in position and feed the cable through the anchors on each component until the cable lug stops the cable (photo 1).
- Before proceeding, feed the cable through the center of the steel cylinder and slide the cylinder up the cable.
- Loosely pre-assemble the two plastic clamp pieces (photo 2) using the included nuts and bolts. Pass about 10 inches of cable through one of the holes in the clamp.
- Select a table leg or other permanent fixture as a secure anchor point. Loop the end of the cable around the secure anchor point and pass it back through the other hole in the plastic clamp.
- Once the cable loop is the desired size, tighten the bolts firmly with the included hex wrench.
- Slide the steel cylinder down the cable and over the plastic clamp. Align the holes in the cylinder with the slot in the clamp and padlock through the holes (photo 3).

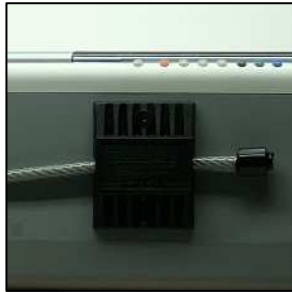

Thank you for choosing SecurTech