


Application Instructions TraVlok anchor model TA48

Please read entire instructions first.

CAUTION: Adhesive bonds on contact.

To install a TraVlok anchor:

- Uncoil the cable completely through the front of the anchor (smaller hole). *Do not detach the cable.*
- Remove the plastic cover plate from the back of the anchor and discard.
- Select the best location on your device to mount the anchor. Be certain the anchor will not interfere with any of your device's functions. The mounting surface should be flat, clean, and free of holes and ridges.
- Anchors are best applied when the mounting surface is horizontal. Tip equipment if necessary.
- Apply a continuous bead of adhesive to the anchor along the center of surface A (see diagram) where it will make contact with your device. Avoid contact with skin. Use enough adhesive so that when the anchor is mounted, surface A will become completely covered with adhesive.
- Press the anchor firmly against the equipment case without twisting for 30 seconds to make sure a solid bond is formed. It is normal for some adhesive to ooze out the sides. Just wipe away any excess adhesive with a tissue.
- Adhesive sets in seconds and anchor cannot be removed or adjusted. Allow several hours to fully set. Maximum bond is achieved after 24 hours.

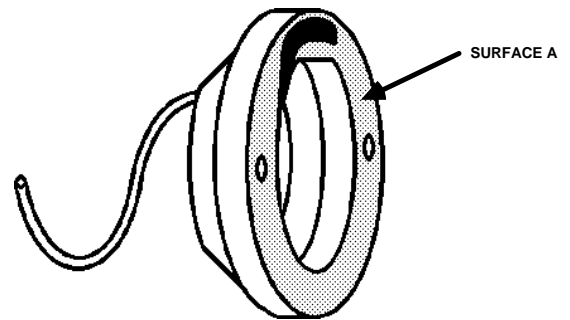

CAUTION: Avoid getting adhesive on skin, in eyes or on clothes. Keep out of the reach of children. Use with care.

Thank you for choosing the Spot Anchor.
Manufactured by SecurTech, LLC

+1 (503) 636-6831
www.SecurTech.com