
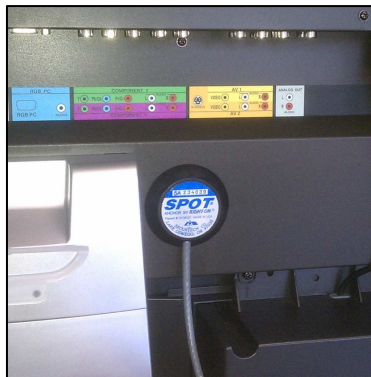


CAUTION: Adhesive bonds on contact. Please read the entire instructions first.

To Install the TV Lock:

- Select the best location on the back of the TV to mount the Spot Anchor. The mounting surface must be completely flat, smooth and free of ridges, screws or access panels. Make sure the anchor's attached security cable will not hinder the TV cables, A/V connectors or mounting bracket.
- It is critical that 100% of the anchors' mounting surface is making contact with the TV. The anchor should not be sticking out past the edge or have any air space under it. Mark the exact mounting position on the TV.
- Many TV cases are made of painted or coated metal. Adhering to this paint or coating may not form a strong bond. Therefore, you should lightly sand the mounting surface area. Clean and dry the mounting surface before proceeding.
- To apply the Spot Anchor, follow the installation instructions that are packaged with the individual anchor.
- The adhesive sets in seconds and the anchor cannot be removed or adjusted. Allow several hours for the adhesive to fully set before securing the cable. The maximum bond will be achieved after 24 hours.
- To secure the cable, loop the padlock shackle through the portion of the TV mounting bracket that is permanently attached to the wall. Use the padlock to secure the cable loop to the TV mounting bracket. Another option is to loop the cable around the bracket and padlock the cable loop to the cable itself.

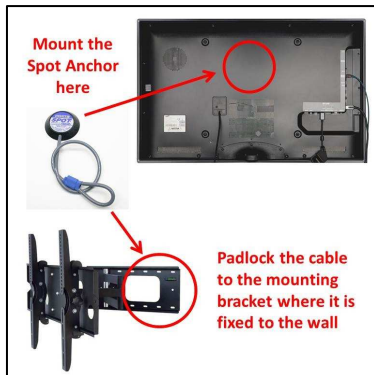

CAUTION: Avoid getting adhesive on skin, in eyes or on clothes. Keep out of the reach of children. Use with care.

Thank you for choosing SecurTech.