


**CAUTION:** Adhesive bonds on contact. Please read entire instructions first.

**To install a TA48 TraVlok anchor:**

- Uncoil the cable completely through the front of the anchor (smaller hole). *Do not detach the cable.*
- Remove the plastic cover plate from the back of the anchor and discard.
- Select the best location on your device to mount the anchor. Be certain the anchor will not interfere with any of your device's functions. The mounting surface should be flat and free of holes and ridges.
- Anchors are best applied when the mounting surface is horizontal. Tip equipment if necessary. Clean mounting surface.
- Apply a continuous bead of adhesive to the anchor along the center of surface A (see diagram) where it will make contact with your device. Use enough adhesive so that when the anchor is mounted, surface A will become completely covered with adhesive.
- Press the anchor against the equipment case without twisting and hold in place firmly for 30 seconds. It is normal for some adhesive to ooze out the sides. Wipe away any excess adhesive with a tissue.
- Adhesive sets in seconds and anchor cannot be removed or adjusted. Allow several hours to fully set before coiling cable back inside anchor. Maximum bond is achieved after 24 hours.
- To secure your device with the TraVlok, wrap the cable around a secure fixture such as a table leg or desktop cable hole, then padlock the cable loop to the cable itself.

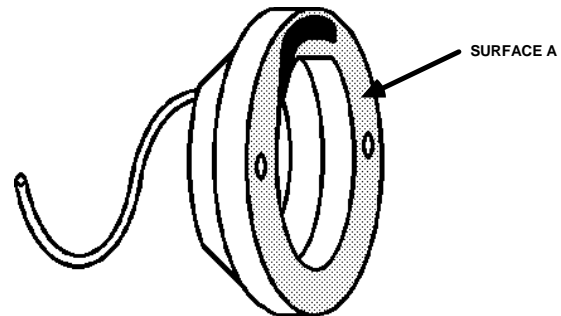


**CAUTION:** Avoid getting adhesive on skin, in eyes or on clothes. Keep out of the reach of children. Use with care.

Thank you for choosing SecurTech

**CAUTION:** Adhesive bonds on contact. Please read entire instructions first.

**To install a TAB48 TraVlok anchor:**

- Uncoil the cable completely through the front of the anchor (smaller hole). *Do not detach the cable.*
- Remove the plastic cover plate from the back of the anchor and use it for a template.
- Select the best location on your device to mount the anchor. Be certain the anchor will not interfere with any of your device's functions. The mounting surface should be flat and free of holes and ridges. Carefully consider the location of the two holes and the bolt clearance to avoid internal equipment damage.
- Remove the equipment case and mark it using the cover plate as a template. Drill or punch two 1/4" holes in the equipment case.
- Thread the two bolts into the TraVlok anchor by hand. Check the alignment of the bolts with the newly drilled holes.
- Anchors are best applied when the mounting surface is horizontal. Tip equipment if necessary.
- Apply a continuous bead of adhesive to the anchor along the center of surface A (see diagram) where it will make contact with your device. Use enough adhesive so that when the anchor is mounted, surface A will become completely covered with adhesive.
- Press the anchor against the equipment case without twisting and hold in place firmly for 30 seconds. It is normal for some adhesive to ooze out the sides. Wipe away any excess adhesive with a tissue.
- Adhesive sets in seconds and anchor cannot be removed or adjusted. Allow several hours to fully set. Maximum bond is achieved after 24 hours.
- Thread the nuts firmly onto the bolts on the inside of the equipment case.
- To secure your device with the TraVlok, wrap the cable around a secure fixture such as a table leg or desktop cable hole, then padlock the cable loop to the cable itself.

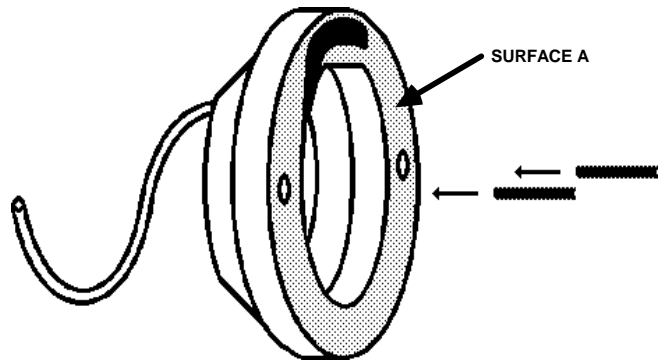

**CAUTION:** Avoid getting adhesive on skin, in eyes or on clothes. Keep out of the reach of children. Use with care.

Thank you for choosing SecurTech